

Operating and installation instructions for washer-extractor PW 6055 Vario

To avoid the risk of accidents or damage to the machine it is **essential** to read these instructions before it is installed and used for the first time.

en - GB

M.-Nr. 09 757 290

Caring for the environment


Disposal of the packing material

The packaging is designed to protect the machine from damage during transportation. The packaging materials used are selected from materials which are environmentally friendly for disposal and can normally be recycled.

Recycling the packaging reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites.

Disposing of your old machine

Electrical and electronic machines often contain valuable materials. They also contain materials which, if handled or disposed of incorrectly could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your machine. Please do not therefore dispose of it with your household waste.

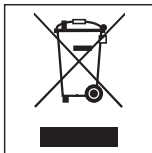

Please dispose of it at your local community waste collection/recycling centre or contact your dealer for advice. Ensure that it presents no danger to children while being stored for disposal.

Energy saving tips

Energy and water consumption

- Water consumption and energy usage are determined by the size of the load.
To make the most out of your machine load the maximum dry load for the programme you are using.

Detergent


- Do not exceed the amounts of detergent recommended by the manufacturer on the packaging.
- Reduce the amount of detergent for smaller loads.

When drying with a tumble dryer

Selecting the highest possible spin speed for the wash programme will save energy when drying in a tumble dryer afterwards.

Caring for the environment	2
Warning and Safety instructions	6
Operating the washer-extractor	13
Control panel	13
Before using for the first time	13
Display	14
Operating a wash-salon machine	16
Notes and tips on laundry care	17
1. Sort the laundry	17
2. Load the drum	18
3. Select a programme	18
Garment care label symbols	19
Short instructions	20
Select a programme	24
Selecting/changing a programme	24
Saving a favourite programme	26
Extras	27
Pre-wash	27
Starch stop	27
Rinse hold	28
Intensive*	28
Water plus*	28
Timer	29
Spinning	30
Maximum final spin speed	30
Rinse and interim spin	30
To omit the final spin (Rinse hold)	30
To omit the spin between rinses and the final spin	30

Contents

Changing the programme sequence	31
Programme sequence	31
Anti-crease	31
To interrupt a programme	31
To cancel a programme	31
To alter a programme	31
Adding or removing laundry after a programme has started	32
 Detergent	 33
Water softeners	33
Washing with several components	33
Colour run and dye removers/dyes	33
Fabric conditioners, liquid starch and starch formulations	34
Automatic dispensing of fabric conditioner or liquid starch to laundry at the end of a programme	34
Adding fabric conditioner or liquid starch separately	34
Adding starch separately	34
Adding starch separately using Starch stop	34
External dispensing system	35
Empty sensor	35
 Cleaning and care	 37
Cleaning the machine	37
Cleaning the water inlet filters	39
 Problem solving guide	 40
The programme does not start	40
A fault message appears in the display	41
General problems	42
An unsatisfactory wash result	43
The drum door cannot be opened by pressing the  button	44
To continue a programme after an interruption to the power supply	44
Opening the drum door in the event of a blocked drain outlet and/or power failure	45

After sales service	48
PC / Optical interface	48
Optional accessories	48
 Installation and connection	 49
Front view	49
Rear view	50
Installing the machine	51
Installation surface	52
Removing the transit bars	52
Re-fitting the transit bars	54
Levelling the machine	54
Screwing out and adjusting the feet	54
Securing the machine to prevent it slipping	55
Washer-dryer stack	56
Installation on a raised plinth	56
Payment system	56
Plumbing	57
Connection to the cold water supply	57
Connection to the hot water supply	58
Water drainage	59
Dump valve version	59
Machines with a drain pump	59
Electrical connection	60
Single phase AC 230 V - country variant	61
 Technical data	 62

Warning and Safety instructions

This machine complies with current safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the machine, please read these instructions carefully before using it for the first time. They contain important information on its safety, use and maintenance.

Keep these instructions in a safe place and ensure that they are made available to new users. They must be made aware of these warning and safety instructions.

Pass them on to any future users/owners of the machine.

Correct application

► Only use the machine to wash items which are specified by the manufacturer to be machine-washable on the wash-care label, and textiles composed of hand-washable wool or wool blend fabrics as well as satin, lace, silk and other hand-washable garments. Any other applications may be dangerous. The manufacturer cannot be held liable for damage resulting from incorrect or improper use of the machine.

► This machine must be used as described in these operating instructions and must be checked on a regular basis to make sure it is functioning correctly. Maintenance must be carried out when necessary.

► This machine is not intended for outdoor use.

Warning and Safety instructions

- ▶ This machine can only be used by people with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, if they are supervised whilst using it or have been shown how to use it in a safe way and recognise and understand the consequences of incorrect operation.
- ▶ Children 8 years and older may use the machine unsupervised only if they have been shown how to do so in a safe way and recognise and understand the consequences of incorrect operation.
- ▶ Children must not be allowed to clean or maintain the machine unsupervised.
- ▶ Please supervise children in the vicinity of the machine and do not let them play with it.
- ▶ It is the operator's responsibility to ensure that the standard of disinfection in thermal as well as chemo thermal procedures is maintained (in accordance with local authority regulations) by carrying out suitable validation tests. Disinfection programmes must not be interrupted, as this can have a limiting effect on the disinfection result.
- ▶ This washing machine is supplied with a special lamp to cope with particular conditions (e.g. temperature, moisture, chemical resistance, abrasion resistance and vibration). This special lamp must only be used for the purpose it is intended for. It is not suitable for room lighting. Replacement lamps may only be fitted by a Miele authorised person or the Miele Service Department.

Warning and Safety instructions

Technical safety

- ▶ Before setting up the machine, check it for any externally visible damage.
Do not install or use a damaged machine.
- ▶ The electrical safety of this machine can only be guaranteed when correctly earthed. It is most important that this standard safety requirement is met. If in any doubt, please have the electrical installation tested by a qualified electrician. Miele cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).
- ▶ Unauthorised repairs could result in unforeseen dangers for the user, for which Miele cannot accept liability. Repairs should only be undertaken by a Miele authorised service technician. If this is not done, any resultant damage will not be covered by the guarantee. Ensure current is not supplied to the machine until after maintenance or repair work has been carried out.
- ▶ Do not make any alterations to the machine, unless authorised to do so by Miele.
- ▶ The machine must be isolated from the electricity supply in the event of a fault and during installation, maintenance and repair work.

Warning and Safety instructions

- ▶ This machine must only be connected to the on-site water supply using a new hose kit. Old hoses must not be re-used. Check the hose regularly for signs of wear. Change in good time to avoid the risk of leaks and subsequent damage.
- ▶ Faulty components must only be replaced by genuine Miele original spare parts. Only when these parts are fitted can the safety standards of the machine be guaranteed.
- ▶ Do not connect the machine to the mains electricity supply by an extension lead or a multi-socket adapter. These do not guarantee the required safety of the machine (e.g. danger or overheating).
- ▶ If this machine is being used in a commercial environment please ensure that all relevant health and safety regulations are obeyed.
- ▶ This machine must not be used in a non-stationary location (e.g. on a ship).
- ▶ Please observe the instructions in "Installation and connection" and "Technical data".
- ▶ The socket must be easily accessible after installation in order to disconnect the washing machine from the electricity supply.
- ▶ For hard-wired machines, the all-pole isolator provided on-site must be easily accessible after installation in order to disconnect the washing machine from the electricity supply.
- ▶ In areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the machine and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the guarantee.

Warning and Safety instructions

Correct use

- ▶ The maximum load of dry laundry for this machine is 6.5 kg. See the "Programme chart" for the maximum recommended loads in individual programmes.
- ▶ Do not install your machine in rooms where temperatures below freezing may occur. Frozen hoses may burst or split. The reliability of the electronic control unit may be impaired at temperatures below freezing point.
- ▶ Before using the machine for the first time, check that the transit bars at the rear of the machine have been removed (see section on "Installation and connection"). During spinning, a transit bar which is still in place may result in damage to both the machine and adjacent furniture or appliances.
- ▶ Turn off the stopcock if the machine is to be left for any length of time (e.g. holiday), especially if there is no floor drain (gully) in the immediate vicinity.
- ▶ Flooding danger.
If hooking the drain hose into a wash basin, check that the water can drain off quickly enough to prevent the sink from overflowing. Make sure the drain hose is secure, so that the force of the water flowing out of the hose does not dislodge it.
- ▶ Take care to ensure that foreign objects (e.g. nails, pins, coins, paper clips) do not find their way into the machine with the laundry. These may damage components of the machine (e.g. suds container, drum), which in turn can result in damage to the laundry.

Warning and Safety instructions

- ▶ If the correct amount of detergent is dispensed, the machine should not need to be descaled. If, however, you do wish to descale the machine only use proprietary non-corrosive descaling agents and strictly observe the instructions on the packaging. A special descaling agent is available to order from your Miele Dealer or the Miele Spare Parts Department.
- ▶ Textiles which have been pre-treated in solvent based cleaning agents must be thoroughly rinsed in clean water before being washed in the machine.
- ▶ Never use solvent based cleaning agents, e.g. those containing benzene, in this machine, as this may result in damage to component parts and create toxic fumes. Such agents also pose a fire and explosion hazard.
- ▶ Benzene, petrol, paraffin, or any easily flammable liquid must not be stored or used near the machine. Fire and explosion risk!
- ▶ Only use dyes specified by the manufacturer as being suitable for use in a washing machine. Always observe the manufacturer's instructions carefully.
- ▶ Colour run and dye removers contain sulphur compounds which can cause damage such as corrosion. Do not use these products in this machine.

Warning and Safety instructions

► Avoid contact of stainless steel surfaces (front, lid, casing) with liquid cleaning and disinfecting agents which contain chlorine or sodium hypochlorite. These agents can have a corrosive effect on stainless steel.

Aggressive vapours containing chlorine bleach can also be corrosive. Do not store open containers of these agents near the machine.

► Do not use a high pressure cleaner or hose to clean the machine.

► It is particularly important to observe the manufacturer's instructions when using a combination of cleaning agents and special application products. Products must only be used for applications approved by the manufacturer to avoid any material damage or the occurrence of strong chemical reactions

Accessories


► Accessory parts may only be fitted when expressly approved by Miele. If other parts are used, guarantee, performance and product liability claims will be invalidated.

► A Miele tumble dryer can be stacked on top of a Miele washing machine using the appropriate stacking kit (available as an optional accessory).

► If installing the machine on a Miele plinth, (available as an optional accessory), please make sure you order the right one for this washing machine.

Miele cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.

Control panel

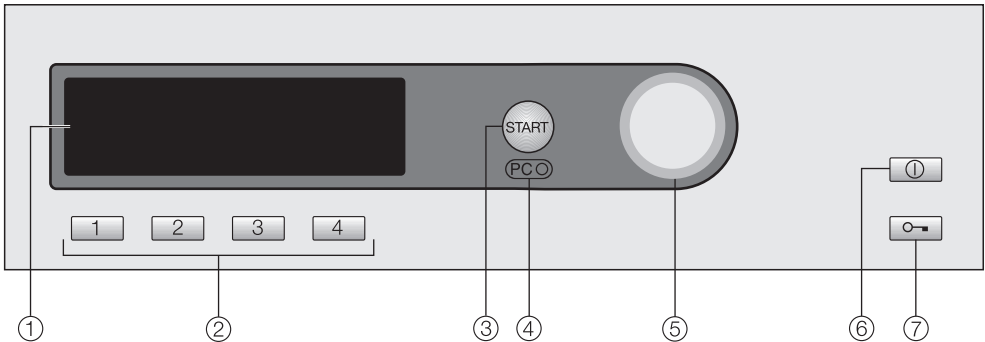

① Display

See the following pages for more information.

② Short cut buttons (keys)

For selecting an individual washing programme quickly. These buttons can be re-programmed to select your favourite wash programmes instead of the pre-set ones.

③ Start button

④ PC/Optical interface

This is used by Miele service technicians during servicing work for testing purposes.

⑤ Multi-function selector

This is used to select menu options (by turning it) and to confirm your selection (by pressing it).

⑥ On-Off button ①

To save energy, the machine will switch off automatically 15 minutes after the end of the programme/anti-crease phase or after being switched on, if no other selection is made.

⑦ button

Opens the machine door.

Before using for the first time


Before using the machine for the first time ensure that it is correctly installed and connected. See "Installation and connection". Also check that the drain filter is securely tightened to prevent the risk of leaks during use.

Commission the machine as described in the separate booklet "Commissioning, Programme chart and Settings" supplied with the machine.

Operating the washer-extractor

Display

Entry menu

1	Cottons Uni.	60°C	Programme selection...
2	Minimum iron	40°C	Settings ▶...
3	Delicates	40°C	
4	Woollens 	30°C	10:00

When the machine is switched on, the entry menu (with four favourite programmes listed) appears and *Programme selection* is highlighted.

Multi-function selector

Turning the multi-function selector moves the highlighting to the next option.

Pressing the multi-function selector selects the highlighted option.

Short cut buttons

Pressing a short cut button selects one of the four favourite programmes shown on the left of the display.

If you wish to change the programmes shown in this list you can do so (see "Saving a favourite programme" for more information).

The short cut buttons have different functions in the other menus. Where this is the case, an arrow ▼ will appear in the display above the short cut button, together with a description of its function .

Programme selection

There are two ways of selecting a programme:

- Option 1: Select *Programme selection* from the display and press the multi-function selector.
- Option 2: Press short cut button [1], [2], [3] or [4]. This will automatically take you into the main menu for that programme.

Operating the washer-extractor

Programme selection menu




You can use the multi-function selector to select any programme. The highlighting will move up or down depending on the direction the multi-function selector is turned in.

The ▼▲ arrows on the right of the display, indicate further options.

Pressing the multi-function selector takes you to the main menu of the programme selected.

Wash programme main menu

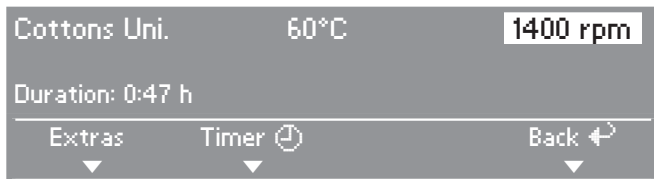

Turn the multi-function selector to highlight programme, temperature or spin speed. Pressing the multi-function selector selects the highlighted option and opens the relevant sub-menu.

The sub-menus *Extras* and *Timer* can be accessed by pressing the short cut button directly below them.

To go back to the entry menu press short cut button 4 below the word *Back*.

Alternatively, you can also highlight and confirm all options by just using the multi-function selector.

Settings menu

The *Settings* menu is used for altering standard settings. See the separate booklet supplied with the machine for further information on how to alter settings.

Operating the washer-extractor

Operating a wash-salon machine

The entry menu will vary depending on the *Control* setting selected.

The machine is operated either with the short cut buttons **1**, **2**, **3**, **4** or the multi-function selector.

WS shortcut keys, basic

1	Cottons Uni.	60°C
2	Minimum iron	40°C
3	Delicates	40°C
4	Woollens ↗	30°C


4 programmes are available to choose from. To specify which programmes are available go to the *Settings/supervisor level* menu.

WS shortcut keys + Logo

Miele PROFESSIONAL			
30°C ▼	60°C ▼	95°C ▼	More ▼

12 programmes are available to choose from. To specify which programmes are available go to the *Settings/supervisor level* menu.

1. Sort the laundry

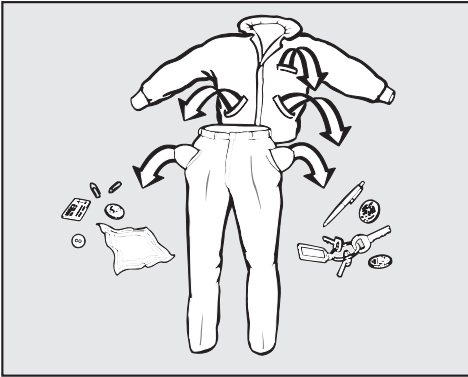

- Empty all pockets.

⚠ Foreign objects (e.g. nails, coins, paper clips, etc.) can cause damage to textiles and to components in the machine.

Removing marks

- Badly soiled areas, stains etc. should be cleaned as soon as possible, preferably whilst still fresh. Spillages should be carefully dabbed off using a soft, colourfast cloth. Do not rub.

Badly soiled areas can be pre-treated with liquid detergent, stain removers etc. first, following the manufacturer's instructions. With particularly stubborn stains ask your dry cleaner for advice.

⚠ Do not use solvent-based cleaning agents in this machine.

Sorting laundry


- Sort the laundry by colour and by care label. Most garments have a textile care label in the collar or side seam.

Dark textiles often contain excess dye and should be washed separately several times before being included in a mixed load. Always wash whites and coloureds separately.


Notes and tips on laundry care

General tips


- Curtains: Remove lead weights first or place in a laundry bag.
- Underwiring and collar stiffeners: Any loose wiring in bras, shirt collar stiffeners, etc. should be removed or sewn in.
- Knitted garments, trousers and jeans, T-shirts and sweat shirts: Turn inside out, if recommended by the manufacturer.
- Close any zips, fasten hooks and eyes etc before washing.
- Fasten duvet covers, pillow cases etc. to prevent small items from being rolled up inside them.
- See "Programme chart" in separate booklet supplied with the machine for further tips.

Do not wash any items in this machine which are specified by the manufacturer as **not washable** on the care label ( symbol).

2. Load the drum


- Switch the machine on with the On/Off button .

The interior drum lighting will come on.

- Press the  button and open the drum door.
- Unfold the laundry and load loosely into the drum. Mixing both large and small items gives better wash results and also helps distribute the load evenly during spinning.

The most efficient use of energy and water is achieved when a full load is washed. However, do not overload as this causes creases and reduces cleaning efficiency.

- Shut the door with a gentle swing.






 Make sure that no items are caught between the door and the drum.




3. Select a programme





- Select the most appropriate programme for the load being washed.





See "Programme chart" in the separate booklet supplied with the machine for details of which programmes are available.




Garment care label symbols

Washing	
The figure quoted in the bucket is the maximum temperature the garment can be washed at. The number of bars under the symbol indicates the level of agitation permitted.	
	No bar under the symbol: = normal agitation
	One bar under the symbol: = reduced agitation
	Two bars under the symbol: = much reduced agitation
	Hand wash (if no temperature is specified, use the lowest temperature or cold)
	Do not wash


Drying	
The number of dots indicates the drying temperature	
	Normal temperature
	Low temperature
	Do not tumble dry

Ironing	
The number of dots indicates the ironing temperature	
	approx. 200°C
	approx. 150°C
	approx. 110°C
	Do not iron

Professional cleaning	
	Dry clean only. The letters indicate the type of cleaning agent required.
	
	Professional Wet Clean only
	Do not dry clean

Bleaching	
	Any oxidising bleaching agent can be used
	Only use an oxygen based bleach or a non-chlorine bleach
	Do not bleach

Short instructions


 It is very important to read the "Notes and tips on laundry care" section before proceeding.

❶ Sort the laundry


❷ Load the drum


- Switch on the machine.

The interior drum lighting will come on.

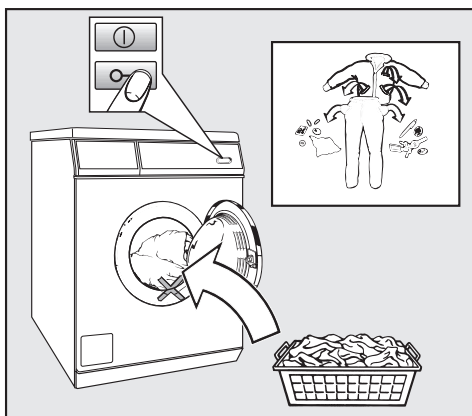

- Open the drum door.
- Unfold the laundry and load loosely into the drum.

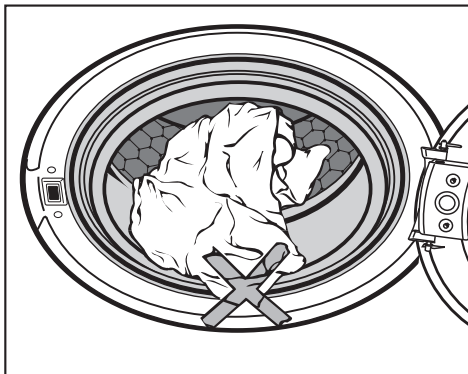

 Make sure that no items are caught between the door and the drum.

- Shut the door with a gentle swing.


③ Select a programme

Programme descriptions


- See separate booklet "Commissioning, Programme chart and Settings".

You can select a programme either by:

- using the appropriate short cut button to select one of the four programmes listed in the display ("favourites"), or

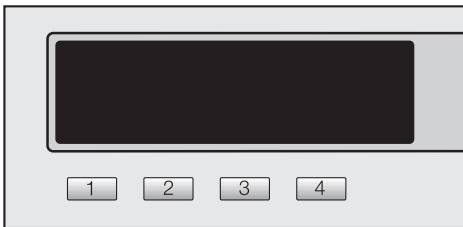

- Select the programme you require from the *Programme selection* menu.

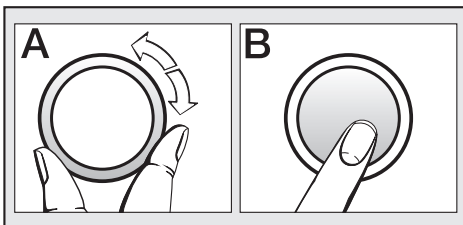

- If required, you can then select any Extras and/or *Timer* for Delay start from the relevant sub-menu.

Payment system

If your machine is connected to a payment system, the amount of credit required will appear in the display.

Credit will be lost if, after the programme has started, the door is opened or the programme cancelled (depending on how the machine was set up).

Short instructions

4 Add detergent

Take the level of soiling and water hardness into account.


Too little detergent results in:

- Laundry not getting properly clean, and with time may become grey and hard to the touch.
- Greasy particles clinging to laundry.
- Limescale deposits on the heater elements.

Too much detergent results in:

- Excessive foam which causes a low level of agitation and poor wash, rinse and spin results.
- A burden to the environment.

See "Detergent" for further information.

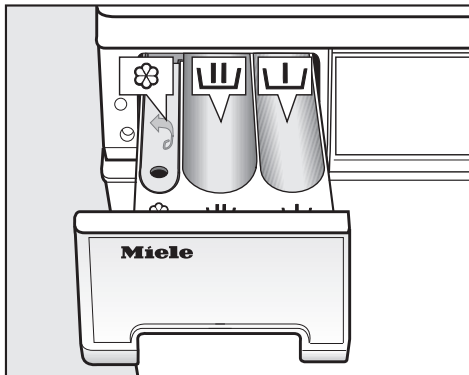

- Pull out the detergent drawer and add detergent to the compartments as follows:

☞ = Detergent for the pre-wash

☞☞ = Detergent for the main wash

☼ = Fabric conditioner, liquid starch or proofing agent

- Close the detergent drawer.

The ☼ compartment is not used during Disinfection programmes. Do not put anything in the ☼ compartment.

5 Start the programme

The *Start* button will flash as soon as a programme can be started.

- Press the *Start* button.

The Start button will now light up constantly.

The estimated programme duration will appear in the display. This will count down in one minute steps. During the first 10 minutes the machine measures how much water is being absorbed by the laundry. The programme duration may be shorter depending on this absorbency rate.

The programme sequence is also shown in the display. The machine lets you know which section of the programme has been reached.

Once washing is in progress, you can press the following short cut buttons:

- Button **1** *Extras* to select or de-select extras.
- Button **2** *Timer* to call up the current time of day and the estimated end time of the programme.
- Button **4** *Cancel* to cancel the current programme. The suds are pumped away immediately.

6 Unload the drum


If laundry is not removed as soon as the programme has finished, the anti-crease phase will begin and the drum will turn at intervals to help prevent creasing.

Anti-crease will flash alternately with *Finish* in the display.

The machine will switch off automatically 15 minutes after the end of the anti-crease phase. You will need to press the **1** button to switch it back on again.

- Press the **0** button to open the drum door.
- Remove the laundry.

Check that all items have been removed from the drum. Items left in the drum could discolour other items in the next wash or become discoloured themselves.

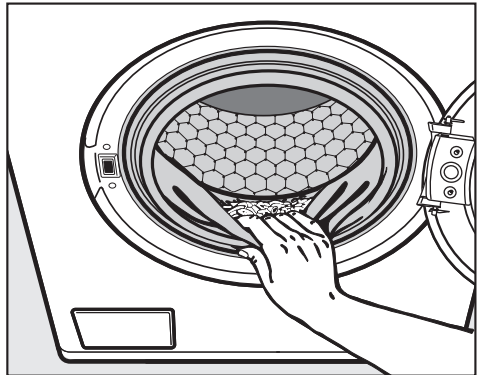


- Check the folds in the door seal for any small articles, e.g. buttons, which might be lodged there.
- Close the drum door. Otherwise there is the danger of objects being placed inadvertently in the drum. If these remained unnoticed and were washed in the next load, they could damage the laundry.
- Switch the machine off with the **1** button.

Select a programme


Selecting/changing a programme

Entry menu

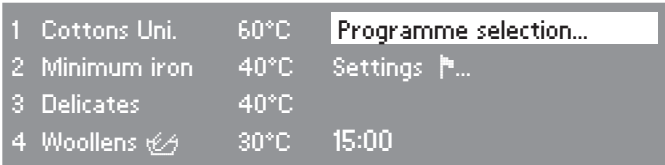

- Press short cut button 1.

Main menu

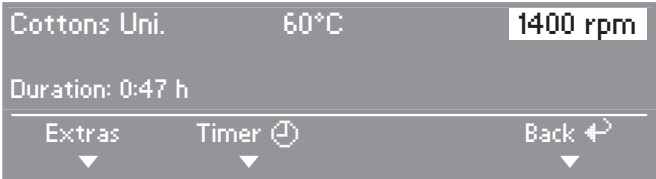

- Using the multi-function selector you can then highlight the following options in the display: Programme, Temperature or Spin speed and confirm your selection by pressing the multi-function selector.

Depending on the option highlighted, the following will be displayed:

– Programme selection




- Use the multi-function selector to select the programme you want and confirm your selection. The main menu will reappear.

Select a programme


Note: If you do not make a selection in the sub-menu within approx. 15 seconds, the display will revert to the main menu.

– Temperature selection

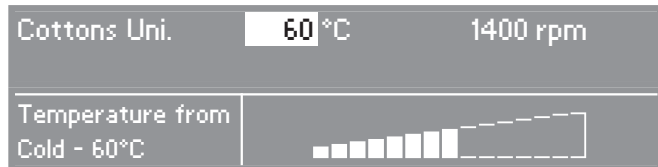


- Use the multi-function selector to select the temperature you want and confirm your selection. The main menu will reappear.


– Spin speed selection

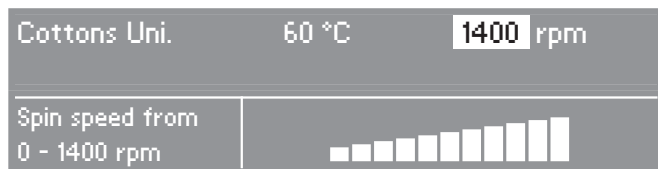

- Use the multi-function selector to select the spin speed you want and confirm your selection. The main menu will reappear.

 Select an Extra option(s)

- Press short cut button . This opens the *Extras* sub-menu.

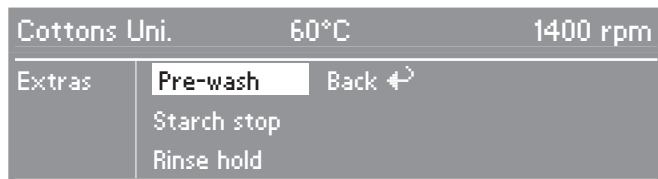

- Use the multi-function selector to select the Extra you want and confirm your selection. The main menu will reappear. Repeat the process if you want to select another extra. See "Extras" for more information.

Select a programme

Saving a favourite programme

You can programme the short cut buttons to call up the four wash programmes you use most frequently. The *Save* option must be activated via the *Settings/Supervisor level* menu before the short cut buttons can be programmed.

Cottons Uni.	40°C	1400 rpm
Pre-wash		
Duration: 1:02 h		
Extras ▼	Timer ⌚ ▼	Save ▼
		Back ↶ ▼

- Press short cut button 3.

Selecting a short cut button


Cottons Uni.	40°C	1400 rpm
Previous:	Cottons Uni.	60°C
Extras:	None	1400 rpm
Save to	: 1 2 3 4	Back ↶

- Use the multi-function selector to select the number you want to save the programme to, and confirm your selection. Your settings have now been saved and the favourite programme will appear in the entry menu.

Repeat the procedure if you want to customise other favourite programmes, and save them to short cut buttons which have not yet been used.

You can use the *Extras* option to augment the basic wash programmes.

To open the Extras sub-menu

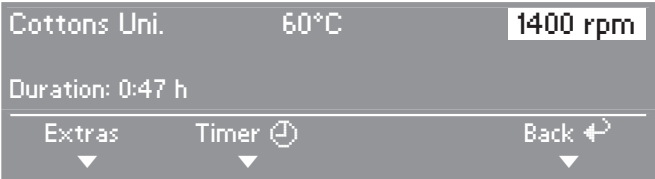

- Press short cut button **1**. This opens the *Extras* sub-menu.

Select an Extra option(s)



- Use the multi-function selector to select the Extra you want and confirm your selection.
 - Repeat the process if you want to select another Extra.
 - A tick will appear to show that an Extra has been selected.

Pre-wash

For laundry with large amounts of dirt (e.g. dust, sand).

Starch stop

Water is drained out of the machine before the last rinse and the programme stops.

The programme can be continued once starch has been added to the laundry in the drum. For more information about this see "Detergent - Adding starch separately".

Extras

Rinse hold

The laundry is not spun after the last rinse and remains suspended in the final rinse water. This reduces creasing if the laundry is not going to be removed from the drum immediately after the end of the programme.

Intensive*

For heavy soiling or where staining is visible.

The duration of the main wash and of the rinses is increased.

Water plus*

The machine is set at the factory so that the water level in the main wash and rinses will be increased if the *Water plus* extra option is selected.


However, you can select other settings for *Water plus*. See the separate booklet supplied with the machine for details under *Settings/Supervisor level*.

*Intensive and *Water plus* have to be set in the *Settings/Supervisor level* menu.

Any extras that are available for a programme will be listed in the Extras sub-menu. If an extra is not displayed, it is not available for use with the programme selected.

The timer can be used to select the time you want the programme to finish. The start of a programme can be delayed from 30 minutes up to a maximum of 24 hours,


To open the Timer sub-menu

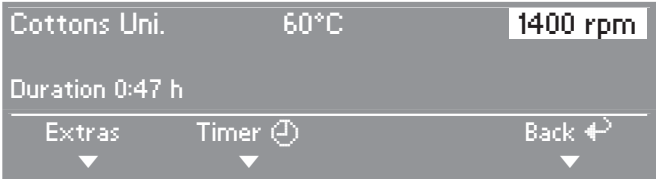

- Press short cut button 2 below the word Timer. This opens the *Timer* sub-menu.

To select a delay start time

You can enter the finish time for a programme in 30 minute stages.

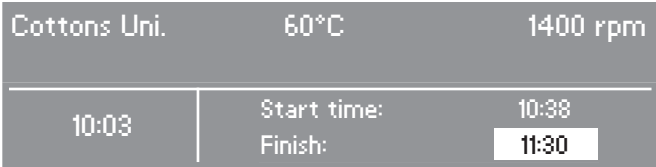

- Use the multi-function selector to select the programme finish time and confirm your selection.
The programme finish time will be adjusted to the next full or half hour.
The start of the programme will now be delayed in parallel with the programme finish time you have selected.

To start the timer

- Press the *Start* button.

The delay start time will be shown counting down in minutes.

To cancel the timer

- Press short cut button 4.

The actual load size can only be determined accurately by the machine once the programme has started. This can cause the finish time for the programme to vary.

Spinning

Maximum final spin speed

You can reduce the final spin speed. However, you cannot select a final spin speed higher than that permitted for the programme selected.

Rinse and interim spin

There is a spin after the main wash and between the rinses. A reduction in the final spin speed will also reduce the interim spin speed.


 
To omit the final spin (Rinse hold)

- Select *Rinse hold* from the *Extras* sub-menu. The laundry will not be spun and will remain suspended in the final rinse water. This reduces creasing if the laundry is not going to be removed from the drum immediately after the end of the programme.

– To start the final spin:

The machine will display the maximum spin speed possible. You can select a spin speed lower than this. Start the final spin by pressing the *Start* button.

– To end the programme:

Press the  button. The water will drain away. Press the door button  again, to open the door.

To omit the spin between rinses and the final spin

- Select *Without spin* from the Spin speed sub-menu. The laundry is not spun after the final rinse. The water will drain away and the machine will go straight into the anti-crease stage.

Changing the programme sequence

Programme sequence

This machine has fully electronic controls with automatic load recognition. It takes in the right amount of water required for the programme depending on the amount of laundry and its absorbency rate. This means that programme cycles and durations can vary.

The display shows the stage the programme has reached.

Anti-crease

At the end of the programme, the drum continues to turn at intervals for up to 30 minutes to help prevent creasing. The door can be opened and items removed at any time during the anti-crease phase.

The *Woollens*, *WetCare sensitive* and *WetCare intensive* programmes do not have an anti-crease phase.

To interrupt a programme

- Switch the machine off with the ① button.

To continue with the same programme:

- Switch the machine back on again with the ① button.
- Confirm the message shown in the display, and then press the *Start* button.

To cancel a programme

You can cancel a programme at any time after it has started:

- Press short cut button  *Cancel*.

The suds will be pumped away.

- Open the drum door before starting a new programme.

The machine will be locked if it is connected to a payment system. whether it is possible to cancel or change a programme will depend on the setting selected (see Settings - *Coin mechanism lock*).

 
To alter a programme

- After starting a programme you can change the spin speed at any time up until the final spin commences and you can select or deselect the *Starch stop* and *Rinse hold* extras.
- You can change the temperature and select or deselect the *Intensive* option during the first 5 minutes of a programme.

Changing the programme sequence

Adding or removing laundry after a programme has started

In some programmes you can add or remove laundry after the programme has started:

- Press the door button  to open the drum door.
- Add or remove items.
- Close the drum door.

The programme will continue automatically.

Please note:

Once a programme has started the machine cannot recognise any adjustment to the load.

For this reason, if laundry is added or removed after the start of a programme, the machine will always complete the programme cycle assuming a full load which can lead to an increase in the programme duration shown in the display.

The door cannot be opened, if:

- the suds temperature is above **50°C**.
- the water is above a certain level.
- the programme has reached the *Final spin* stage.
- a Disinfection programme is running.
- the machine is locked because it is connected to a payment system.

Detergent dispensing

Please follow the detergent manufacturer's instructions.

Instructions for use and recommended amounts for a full load are given on the detergent packaging.

The right amount to dispense will depend on the following:

- The size of the load
- The soiling level of the laundry
- The water hardness level.
Check with your local water supplier if you do not know the hardness level in your area.

The water hardness level


Hardness-range	mmol/l	German scale °d
I (soft)	0 - 1.5	0 - 8.4
II (medium)	1.5 - 2.5	8.4 - 14
III (hard)	Above 2.5	Above 14

Water softeners

A water softener can be used to cut down on the use of detergents in hard water areas. Dispense according to the amount specified on the packaging. First add detergent and then the water softener.

Use a quantity of detergent as for soft water.

Washing with several components

If you wash using several components (e.g. special application detergents), we recommend always dispensing the agents into compartment  in the following order:

1. Detergent
2. Water softeners
3. Stain remover

This way the agents are distributed more evenly.

Colour run and dye removers/dyes

- Do not use colour run or dye removers in this machine.


Dyes suitable for use in a washing machine can be used. However, please note that the salt used in the dyeing process can cause corrosion to stainless steel components in the machine if you dye frequently. Always observe the manufacturer's instructions carefully.

Detergent

Fabric conditioners, liquid starch and starch formulations

- Dispense according to the amount specified on the packaging.

Automatic dispensing of fabric conditioner or liquid starch to laundry at the end of a programme

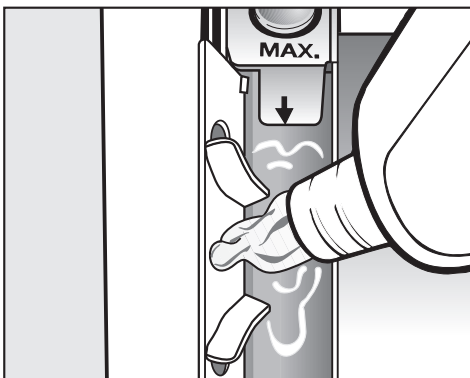

- Add the fabric conditioner or liquid starch to compartment ☼. **Do not exceed the maximum level mark.**

It will be automatically dispensed in the last rinse. At the end of the programme a small amount of water remains in the fabric conditioner compartment ☼.

If starching frequently, thoroughly clean the dispenser compartment, especially the siphon tube and fabric conditioner channel, regularly. See "Cleaning the detergent dispenser drawer". Do not use powder starch formulations or viscous liquid starch in the ☼ compartment as it will clog up. See below.

Adding fabric conditioner or liquid starch separately

- Add fabric conditioner or liquid starch to compartment ☼.
- Select the *Extra rinse* programme.
- Press the *Start* button.

Adding starch separately

- Prepare the starch solution in accordance with manufacturer's instructions on the packaging.
- Add the prepared starch to compartment ☼.
- Select the *Starch* programme.
- Press the *Start* button.

Adding starch separately using Starch stop

- Prepare the starch solution in accordance with manufacturer's instructions on the packaging.
- Before starting a programme select the *Starch stop* extra option. The programme and the "time left" indicator will pause before the last rinse. *Starch stop* will appear in the display.
- Open the drum door and add the prepared starch to the laundry in the drum.
- Close the drum door.
- Select and confirm a spin speed, or
- press the *Start* button.

External dispensing system


This machine is suitable for connecting to an external dispensing system. For this, a conversion kit is required, which must be installed by a Miele approved service technician. The external pumps are controlled by relays in the machine.

The relay is controlled as described in the separate booklet supplied with the machine. The containers must be filled with the correct detergent or disinfectant in the order specified.

Empty sensor

When the *Empty sensor* is activated, a message appears in the display to show when an external liquid agent container is empty (see *Settings/Supervisor level* in the separate booklet supplied with the machine).

If a container is empty, the following message will come up in the display before the start of the programme or whilst the programme is running:

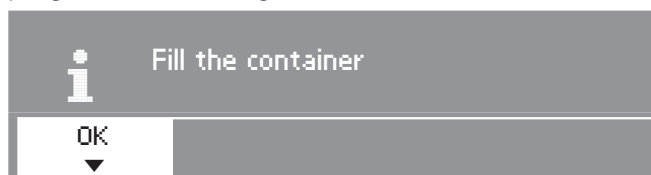

A programme that has already been started continues to run until it has finished.

- Press short cut button to delete the message in the display, and refill the container.


Detergent


If a **Disinfection programme** is running, the following message is displayed:




The programme will be cancelled.

- Press short cut button to delete the message in the display, and refill the container.
- Start the programme again.

 If the container is empty for a disinfection programme, you have to assume that **no** disinfection has taken place. Start the programme again.

 Disconnect the machine from the mains electricity supply.


Cleaning the machine

 Do not use solvents, abrasive cleaners, glass cleaners or all-purpose cleaning agents. These might damage plastic surfaces and other components because of the chemicals they contain.


- Clean the casing with a mild non-abrasive detergent or soap and water. Wipe dry with a soft cloth.
- The drum and any other stainless steel components can be cleaned using a suitable stainless-steel cleaning agent following the manufacturer's instructions on the packaging.


Cleaning the detergent dispenser drawer

Remove detergent residues regularly.

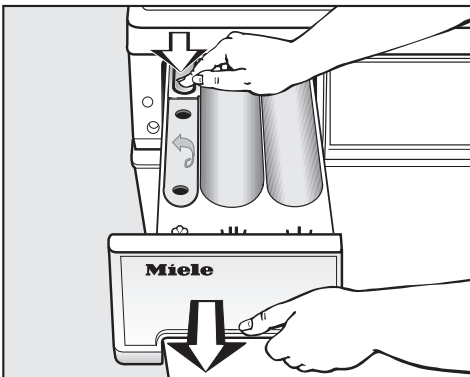


- Pull out the detergent dispenser drawer until a resistance is felt. Press down the release catch and at the same time pull the drawer right out of the machine.
- Clean the drawer with warm water.

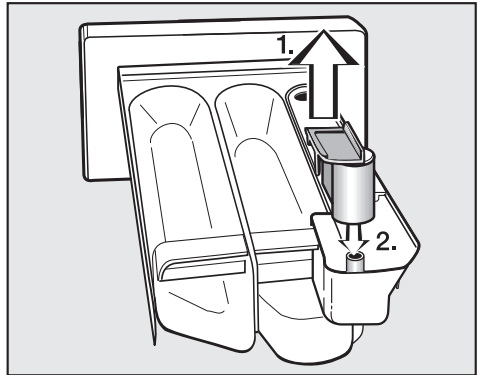

- Clean the siphon.
 1. Remove the siphon from compartment  and rinse under warm running water. Clean the siphon tube in the same way.
 2. Replace the siphon.

Cleaning and care

Cleaning the detergent dispenser drawer housing

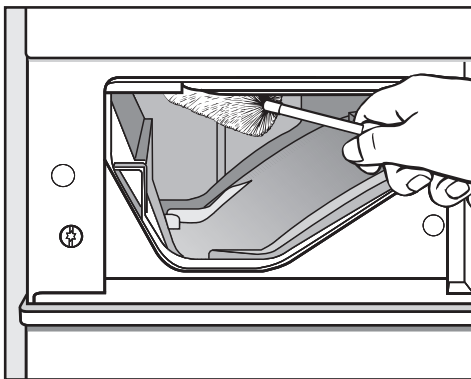

- Use a bottle brush to remove detergent residues and limescale from the jets inside the detergent dispenser drawer housing.



The machine must not be hosed down.

Cleaning the drum, suds container and drainage system

The drum, suds container and drainage system can be cleaned if necessary.

- Start the *Hygiene* programme.
- At the end of the programme check the inner drum and remove any coarse residues.


If you use disinfection programmes on a regular basis, the *Hygiene* programme should be run frequently.

Cleaning the water inlet filters

The machine has two filters to protect the water inlet valve. These filters should be checked every six months or so, or more often if there are frequent interruptions to the external water supply.

To clean the filter in the inlet hose:

- First turn off the stopcock.
- Unscrew the threaded union connecting the free end of the inlet hose to the stopcock.

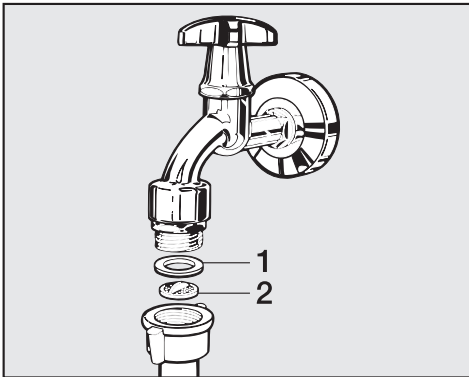


- Remove the rubber seal **1** from the recess.
- Using pointed nose pliers, take hold of the plastic filter bar **2** and remove.
- Clean the plastic filter.
- Put the filter and seal back in the reverse order and reconnect the hose.

Turn on the stopcock and check the connection is watertight. If water drips out, tighten the connection.

To clean the filter in the water inlet valve:

- Using pliers, carefully loosen the ribbed plastic nut on the inlet valve and unscrew.

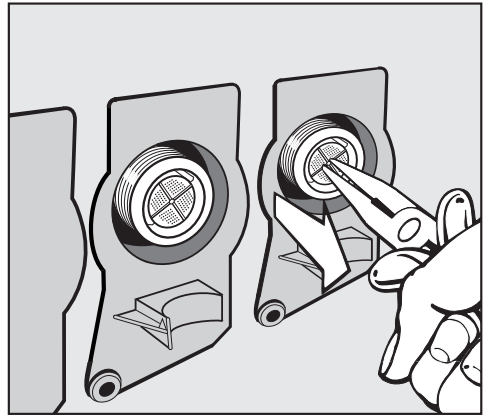


- Use pointed nose pliers to withdraw the plastic filter by the bar (see illustration). Clean, put back and secure.

The two filters **must** be replaced after cleaning.







Problem solving guide

With the help of the following notes, minor faults in the performance of this machine, some of which may result from incorrect operation, can be put right without contacting the Service Department.

 Repair work to electrical appliances should only be carried out by a suitably qualified person in strict accordance with current local and national safety regulations. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.




The programme does not start		
Problem	Possible cause	Remedy
The display remains dark.	There is no power to the machine.	Check whether <ul style="list-style-type: none">– the machine is switched on.– the electricity supply to the machine is switched on.– the fuse or circuit breaker has tripped.
The programme does not start when <i>Spin</i> has been selected.	The machine has not been prepared for using for the first time.	Run the <i>Cottons Universal 60°C</i> programme as described in "Commissioning the machine" in the separate booklet supplied with the machine.
The display is dark and the <i>Start</i> button is flashing slowly.	The display has switched off automatically to save energy (Standby mode).	Press one of the short cut buttons. The machine comes out of standby mode.


A fault message appears in the display

Message in the display	Possible cause	Remedy ❶
 <p>Water intake fault Open the stopcock and check the inlet hose.</p>	<p>The water inlet is blocked or restricted.</p> <p>The water pressure is too low.</p>	<p>Check whether</p> <ul style="list-style-type: none"> – the stopcock is opened enough. – the inlet hose is kinked. <p>Select <i>Low water pressure</i> in the <i>Settings/Supervisor level</i> menu.</p>
 <p>Technical fault</p>	<p>There is a fault.</p>	<p>Start the programme again. If the fault message appears again, contact the Service Department.</p>
 <p>Fault Disinfection temperature not reached</p>	<p>During the disinfection programme the water temperature was not reached.</p>	<p>The machine has not carried out the disinfection cycle correctly. Start the programme again.</p>
 <p>Drain fault Clean the drainage system.</p>	<p>The water outlet is blocked or restricted.</p>	<p>LP version: Clean the drainage system. AV version: Call the Service Department.</p>
 <p>Waterproof system fault</p>	<p>The water protection system has reacted.</p>	<p>Close the stopcock. Call the Service Department.</p>
 <p>Fill the container or Fault Container empty</p>	<p>One of the external detergent containers is empty.</p>	<p>See "Detergent - Empty sensor".</p>

❶ To switch off the fault message, press the multi function selector.


Problem solving guide

General problems		
Problem	Possible cause	Remedy
The machine shakes during the spin cycle.	The machine feet are not level.	Level the machine (see "Installation and connection").
The pump makes strange noises.	This is not a fault! These noises occur at the end of a pump sequence as a normal part of the operation.	
Large amounts of detergent residue remain in the detergent dispenser drawer.	The water pressure is too low.	<ul style="list-style-type: none"> – Clean the filters in the water inlets. – It may be useful to select the <i>Water plus</i> extra option.
	Powder detergent used in conjunction with water softeners tends to become sticky.	In future, add washing powder into the dispenser drawer first, and then add the water softener.
Fabric conditioner is not completely dispensed or too much water remains in the  compartment.	The siphon tube is not correctly positioned or is clogged up.	Clean the siphon, (see "Cleaning and care - Cleaning the detergent dispenser drawer").
The display is in a different language.	A different language has been selected in "Settings  " "Language  .	Set the language you want. The flag symbol will guide you.



An unsatisfactory wash result		
Problem	Possible cause	Remedy
Liquid detergent does not give the required result.	Liquid detergents usually contain no bleaching agents. They do not remove fruit, coffee and tea stains.	<ul style="list-style-type: none"> – Use a general purpose detergent containing a bleaching agent. – Pour stain removers into compartment  of the dispenser drawer and liquid detergent into a dispenser ball. – Never put stain removers and liquid detergent together in the dispenser drawer.
Grey, greasy particles cling to washed laundry.	Insufficient amounts of detergent were used to break down the particles of grease in heavily soiled laundry.	<ul style="list-style-type: none"> – Use more detergent. – Before washing the next load run a Cottons 60°C programme with powder detergent but without a load.
White residues which look like powder detergent are seen on dark textiles after washing.	The detergent contained compounds (zeolites) to aid water softening which are not soluble in water. They have ended up on the laundry.	<ul style="list-style-type: none"> – Try and brush off the residues with a soft brush once the laundry is dry. – Wash dark textiles using a detergent which contains no zeolites. Liquid detergents usually contain no zeolites.
Textiles have particularly greasy soiling.	<ul style="list-style-type: none"> – Select a programme with pre-wash. Use a liquid detergent for the pre-wash and a powder detergent for the main wash. <p>The use of heavy-duty detergent is recommended in the main wash for very heavily soiled work clothing. Consult detergent producers for advice.</p>	

Problem solving guide

The drum door cannot be opened by pressing the button

Possible cause	Remedy
There is no power to the machine.	Check whether <ul style="list-style-type: none">– the machine is switched on.– the electricity supply to the machine is switched on.– the fuse or circuit breaker has tripped.
Power cut.	Open the drum door as described in the next section.
The door was not correctly engaged.	Press hard against the lock side of the drum door and then press the  button.
There is still water in the drum and the machine is unable to drain.	The drainage system may be blocked. Clean the drainage system as described in the next section.
For safety reasons the drum door cannot be opened if the suds temperature is higher than 50°C.	


To continue a programme after an interruption to the power supply

Possible cause	Remedy
Power cut.	<ul style="list-style-type: none">– Once power has been restored, switch the washing machine on with the  button to continue the programme.– Confirm the message shown in the display, and then press the <i>Start</i> button. The programme will then continue with the next programme stage.
The machine has been switched off and then back on again with the  button.	


Opening the drum door in the event of a blocked drain outlet and/or power failure

⚠ Disconnect the machine from the mains electricity supply.

There is a lever behind the detergent drawer fascia panel.

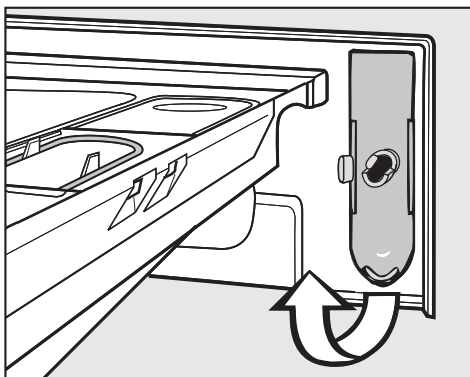

- Remove the lever.

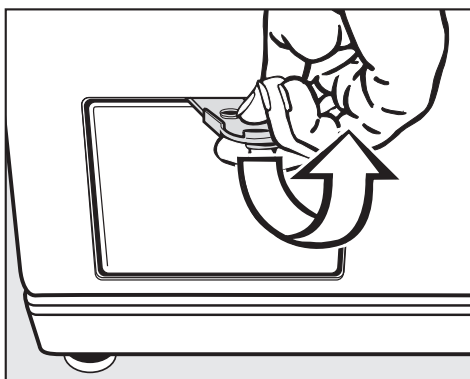

- Use it to open the access flap.

... Machines with a drain pump

If the drain outlet is clogged, a large amount of water will be retained in the machine (**up to 25 litres**).

⚠ Caution: if laundry has been washed at a high temperature, water draining out of the machine will still be hot. Danger of scalding!

- Place a suitable container under the access flap.

When draining water from the machine, do **not** unscrew the drain filter completely or take it right out.




- Unscrew the drain filter lid until water runs out.

To interrupt the flow of water:


- Tighten the drain filter back up again.

Problem solving guide


Once the flow of water ceases:

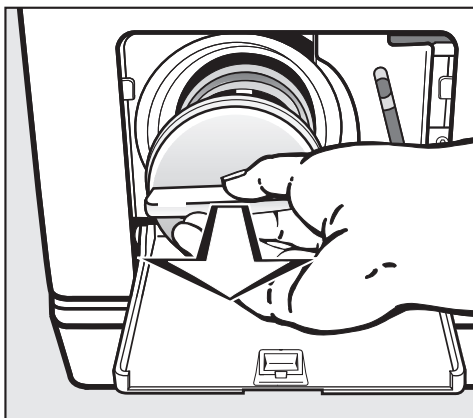

- Remove the drain filter completely.
- Clean it thoroughly.

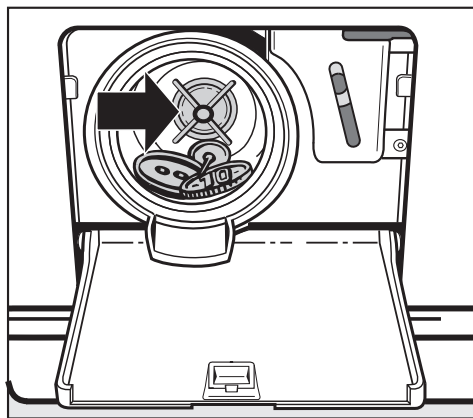


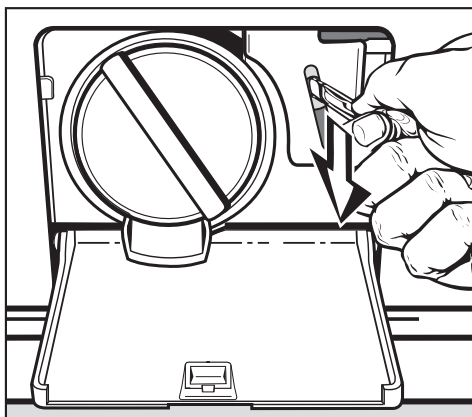
- Remove any foreign objects (e.g. buttons, coins, etc.) and fluff from the filter housing. Turn the impeller by hand to check that it rotates freely.
- Put the drain filter back in place and secure.

 Make sure the drain filter is securely tightened. Otherwise there is a risk of water leakage during use.

To avoid loss of detergent, pour approx. 2 litres of water into the detergent dispenser drawer after cleaning the drain filter. Excess water will be pumped out automatically before the next wash programme.


Opening the drum door

 Always make sure that the drum is stationary before reaching into the machine to remove laundry. Reaching into a moving drum is extremely dangerous.




- Use a spoon handle to pull the emergency release downwards (see arrow). The drum door will open.


... Machines with a dump valve

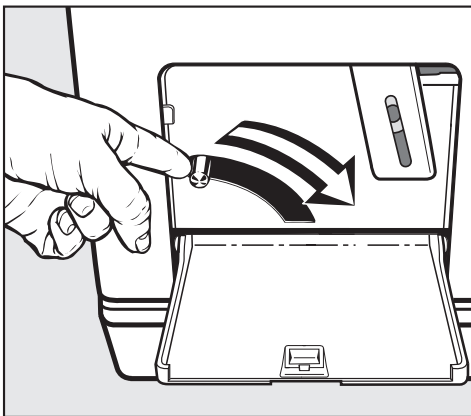

- Push the emergency drain lever downwards (see illustration) and hold until no more water runs out.

Opening the drum door

 Always make sure that the drum is stationary before reaching into the machine to remove laundry. Reaching into a moving drum is extremely dangerous.

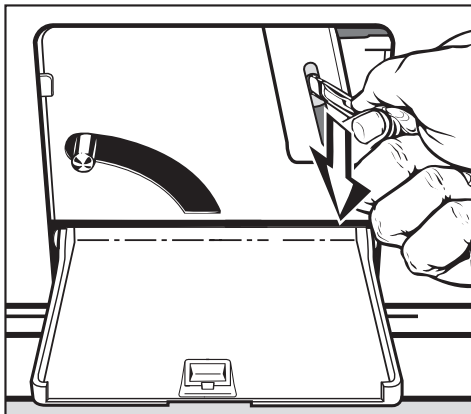


- Use a spoon handle to pull the emergency release downwards (see arrow). The drum door will open.

After sales service

In the event of any faults which you cannot remedy yourself, please contact:

- your Miele dealer, or
- the Miele Service Department (see back cover for contact details).

When contacting your Dealer or the Service Department, please quote the model and serial number of your machine, both of which are shown on the data plate visible above the porthole glass when the drum door is open.

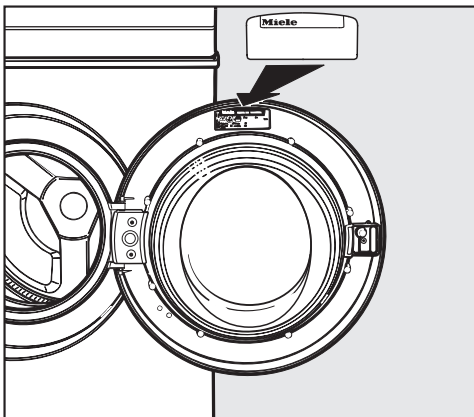

N.B. A call-out charge will be applied for unnecessary service visits where the problem could have been resolved as described in these instructions.

PC / Optical interface


The indicator or check light marked **PC** on the fascia panel is the interface used by Miele service technicians during servicing work for testing purposes and for updating the machine's programme data.

Optional accessories

Optional accessories for this washer-extractor are available from your Miele Dealer or from the Miele Spare Parts Department.

Please note that telephone calls may be monitored and recorded for training purposes.


Front view

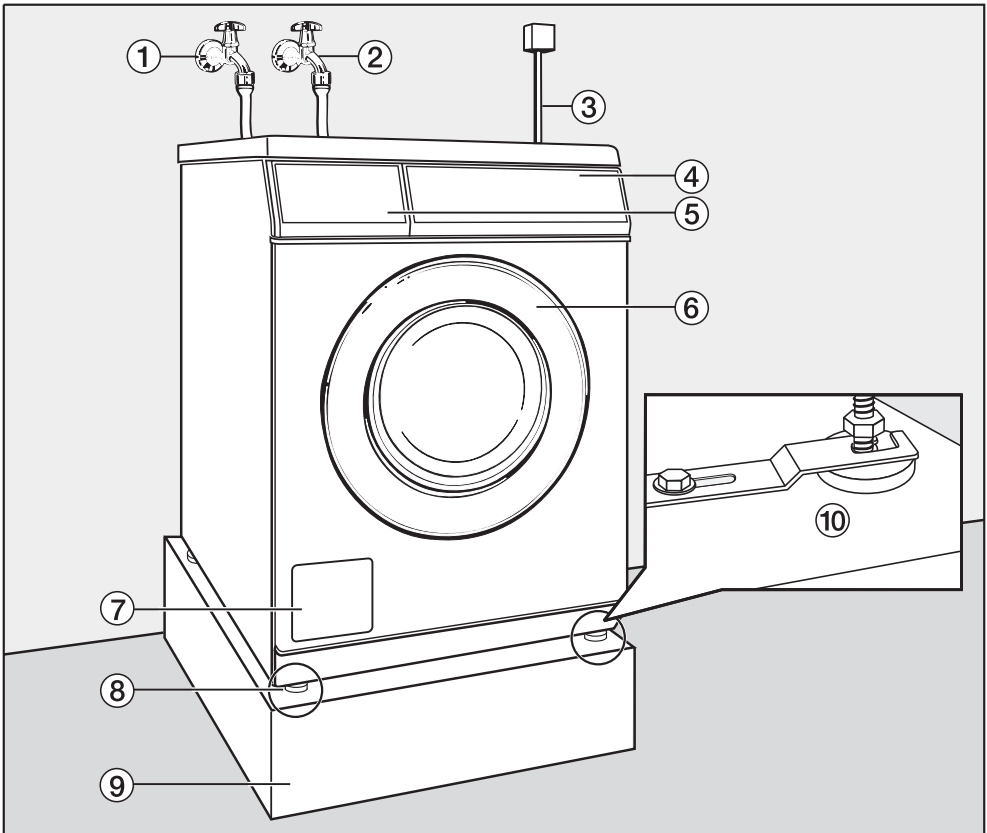

- ① Inlet hose (cold water)
- ② Inlet hose (hot water)
- ③ Electrical connection
- ④ Control panel
- ⑤ Detergent dispenser drawer
- ⑥ Drum door
- ⑦ Access to drain filter, drain pump or dump valve and emergency release
- ⑧ Height adjustable feet
- ⑨ Plinth
- ⑩ Fixing bracket (for installing on a concrete plinth)

Installation and connection

Rear view

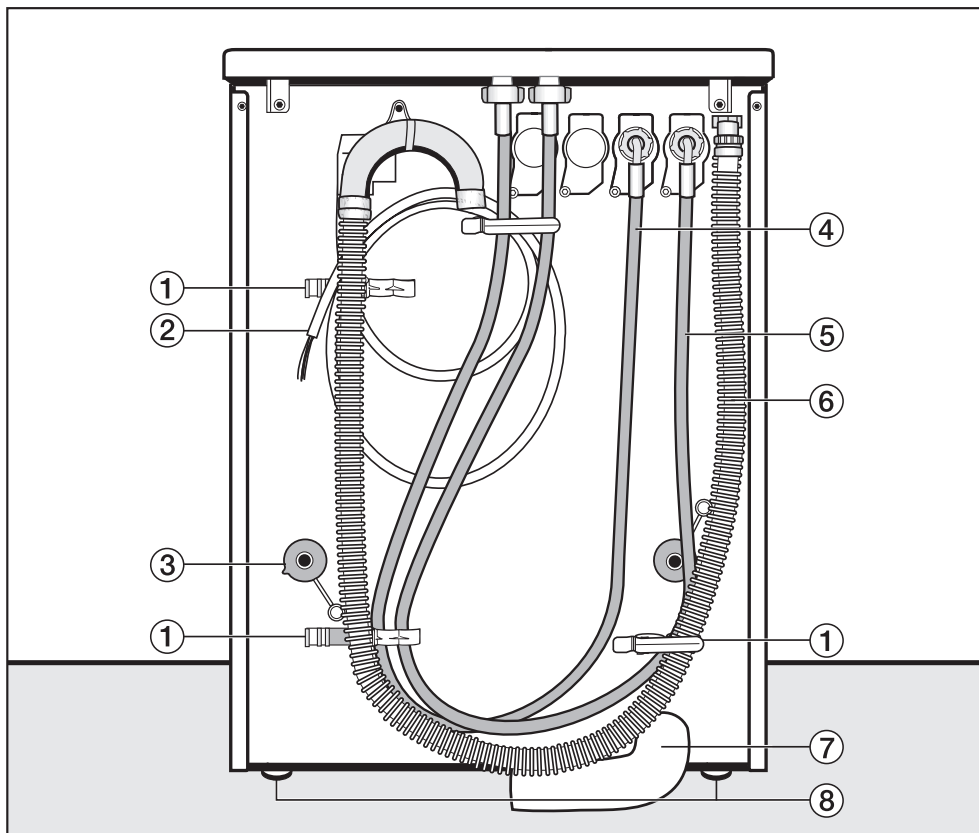

① Holder for:

- Inlet hose
- Drain hose
- Transit bars when removed

② Mains connection cable

③ Safety cap for transit bars

④ Inlet hose (cold water)


⑤ Inlet hose (hot water)

⑥ Drain hose for drain pump


⑦ Drain pipe (optional accessory) for machines with a dump valve

⑧ Height adjustable feet

Installing the machine

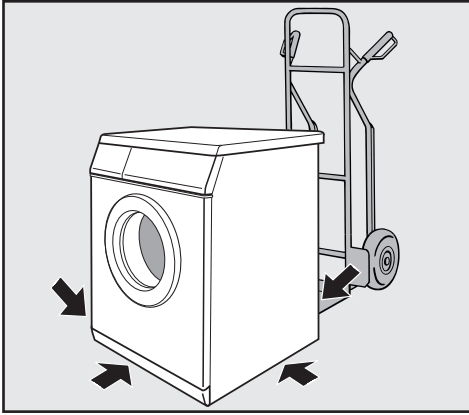


- Remove the packaging and position the machine where you want to use it.

 Ensure the machine is stable during transportation.

This washer-extractor is not suitable for building under.


The machine must be permanently connected to the electricity supply so that the door can be opened. For this reason, it must not be connected to devices such as timers which would switch it off automatically.

Please place the sticker supplied, with the following text, near your machine. "The machine must be permanently connected to the electricity supply so that the door can be opened. Do not open by force."

 Do not install the machine near or directly above an open gully or floor drain. Moisture from these can penetrate the machine and damage electrical components.

Installation and connection

Installation surface

 Ensure that the machine feet and the floor are dry to prevent the machine from slipping during the spin cycle.

A concrete floor is the most suitable installation surface for a washing machine, being far less prone to vibration during the spin cycle than wooden floorboards or a carpeted surface.


- The machine must be level and securely positioned.
- To avoid vibrations during spinning, the machine should not be installed on soft floor coverings.

If installing on a wooden joist floor:

- We recommend a plywood base (at least 70 x 60 x 3 cm). The base should span several joists and be bolted to the joists and not only to the floorboards. Check for the presence of pipes and cables first.
- If possible, install the machine in a corner, as this is usually the most stable part of the floor.


Removing the transit bars

- These must be removed before the machine is used for the first time.

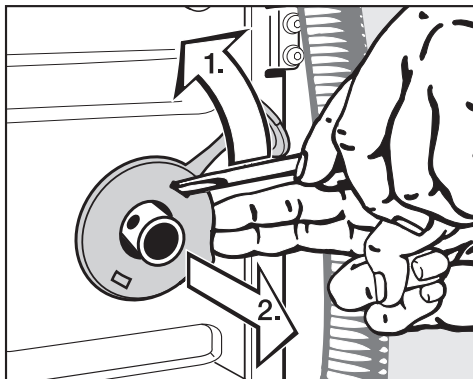


- To remove the left and right covers


1. Use a screwdriver to prise out the cover as illustrated.
2. Pull the cover forwards to remove.

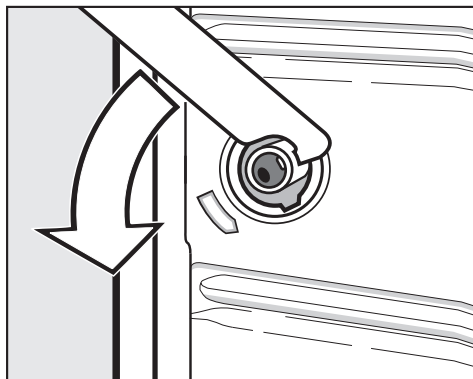


- Using the notched end of the spanner supplied, turn the left-hand transit bar 90°, then

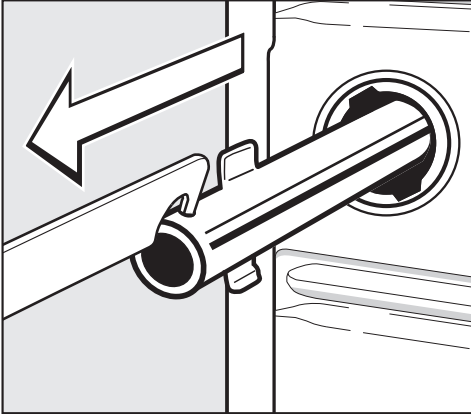

- withdraw the transit bar.

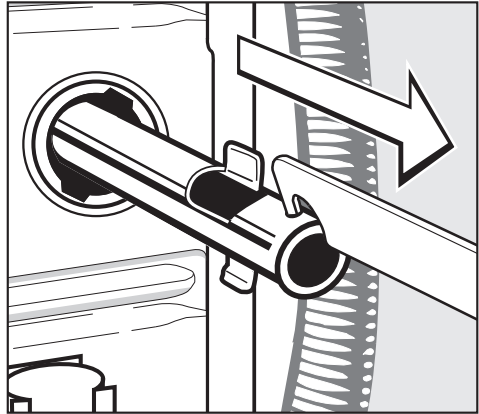


- withdraw the transit bar.

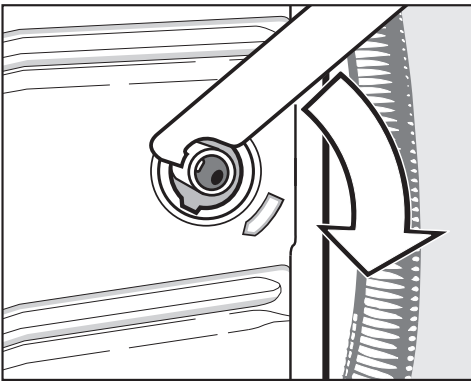


- Turn the right-hand transit bar 90°, then

⚠ To avoid the risk of injury the holes for the transit bars must be covered after they have been removed.

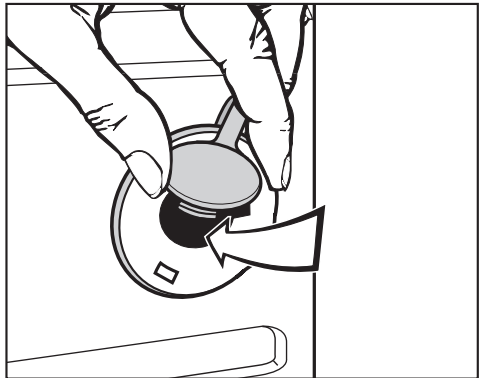


- Fit the covers onto the two holes. Then plug the holes as shown with the caps.

Installation and connection

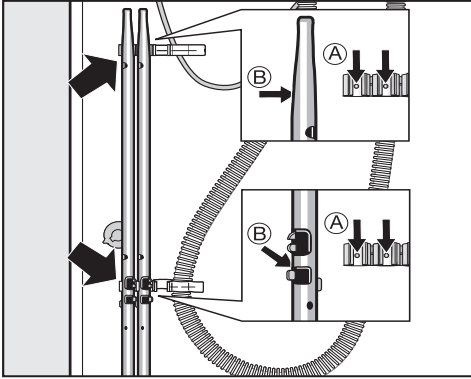

- Secure the transit bars to the back of the machine. Make sure that holes **B** are fitted over retainers **A**.

 The machine must not be moved without the transit bars in place. Store them as shown or keep them in a safe place for future use. They must be re-fitted if the machine is to be moved again (e.g. when moving house).

Re-fitting the transit bars

Re-fitting is carried out by reversing the procedure.


Levelling the machine

The machine must stand perfectly level on all four feet to ensure safe and proper operation.

Incorrect installation may increase electricity and water consumption and may cause the machine to move about.


Screwing out and adjusting the feet

The four adjustable screw feet are used to level the machine. All four feet are screwed in when the machine is delivered.

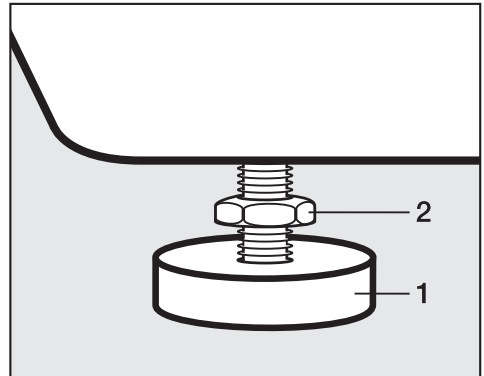

- Using the spanner supplied, turn counter nut **2** in a clockwise direction. Then turn counter nut **2** together with foot **1** to unscrew.

Installation and connection

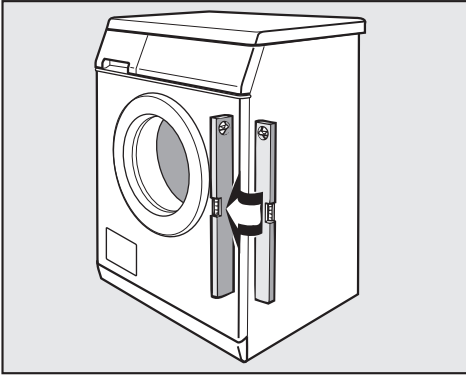


- Use a spirit level to check the machine is standing level.
- Hold foot **1** securely with a pipe wrench. Turn counter nut **2** again using the spanner supplied until it sits firmly up against the housing.



All four counter nuts must sit firmly up against the housing. Please also check this for the feet which did not need adjustment. Otherwise there is the danger of the machine moving about.

Securing the machine to prevent it slipping

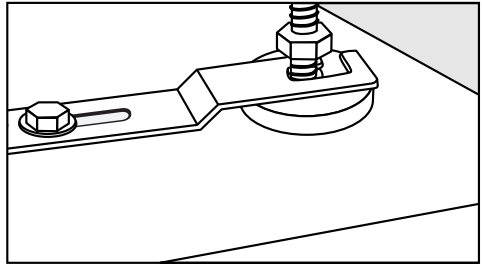


- Secure both front feet on the washing machine using the fixing brackets supplied.
- Follow the fitting instructions supplied.

Installation and connection

Washer-dryer stack

A Miele tumble dryer can be stacked on top of this washer-extractor. A "WTV" stacking kit (optional accessory) is required for this.

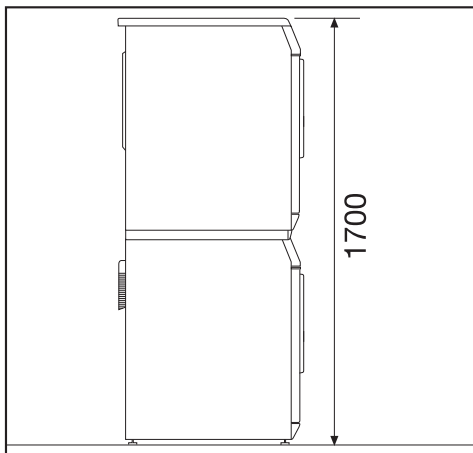

The stacking kit must be fitted by a Miele authorised service technician.

Replacing the lid

If the lid to the washer-extractor has been removed to stack it with a tumble dryer, this must be replaced securely when the washer-dryer stack is dismantled.

Installation on a raised plinth

The washer-extractor can be installed on a steel plinth (open or closed, available as an optional Miele accessory) or on a concrete plinth.

⚠ If the machine is installed on a plinth, it **must** be secured using the fixing brackets supplied with the machine. Otherwise there is the danger of the machine moving and falling off the plinth during spinning.

Payment system

This washer-extractor can be fitted with a payment system (optional accessory).

The payment system can be set up by the Miele technician or authorised dealer when the machine is commissioned.

Coins / tokens must be removed from the coin box regularly, otherwise it will become blocked.

Plumbing

The machine must be connected to the water supply in strict accordance with current local and national water authority regulations.

UK only:

This machine is a WRAS approved product. To comply with WRAS requirements, this machine must be connected to the potable water supply via the non-return valves supplied with it.

The machine is designed to operate with a flow pressure of between 1 and 10 bar (100 kPa and 1,000 kPa). At higher water pressures it is essential to fit a reducer valve.

Connection to the water supply should be carried out by a qualified plumber and should incorporate a stopcock with a 3/4" thread. The stopcock should be fitted by a qualified plumber.

The machine is supplied as standard with two hoses, for connection to a cold or a hot and cold water supply.

Connection to the cold water supply

The cold water inlet hose (blue stripes) must be connected to the on-site cold water supply via a 3/4" threaded union. It is **not** suitable for connection to a hot water supply.



The connection point is subject to mains water pressure. Turn on the stopcock slowly and check for leaks. Correct the position of the washer and union if appropriate.

Maintenance and care

Only use a genuine Miele hose should you ever need a replacement. Miele hoses are tested to withstand pressure of at least 70 bar (7,000 kPa).

In order to protect the water inlet valve, the two dirt filters - one in the open end of the inlet hose, one at the inlet point in the machine - must not be removed.

Extension hose

Longer hoses 2.5 or 4.0 m in length are available from your Miele dealer or the Miele Spare Parts Department as optional extras.

Installation and connection

Connection to the hot water supply

To keep electricity consumption costs down this machine can be connected to a **(ring) piped hot water supply**. The maximum temperature must not exceed 70°C.

It is not economical to run it from an individual hot water supply if it is not in continuous use, as the water in the supply pipes cools down and more energy would be required to reheat the water.

For hot water connection the same conditions apply as for cold water connection.

The inlet hose with the red stripes (hot water hose) is connected to the stopcock.

For operational reasons the machine must not be connected to hot water only.

If the machine is **not** connected to a hot water supply, the hot water inlet hose must be disconnected and the water settings for the *main wash*, *pre-wash* and *rinses* must be reprogrammed.

- Select the cold option in the *Settings/Supervisor* menu.

The programme durations may be longer.

- Disconnect the hot water hose (red stripes).
- Plug the hole with the blanking cap supplied.

Connection to a very hot water supply

It is possible to connect the machine to a very hot water supply, 70°C to a maximum of 85°C. A special inlet hose is required. The machine must also be reprogrammed by a Miele service technician or Miele authorised service dealer.

Water drainage

Dump valve version

A motorised dump valve is used to drain the machine. A DN 70 angle connector can be used for draining the machine via an on-site gully (with odour trap). N.B. If not supplied with the machine, an angle connector is available to order from Miele.

* For a delivery head of more than 1 m (up to a max. of 1.6 m) a second duo-drain pump is available with the corresponding kit from the Miele Spare Parts Department or your Miele Dealer.

Machines with a drain pump

The machine drains via a drain pump with a delivery head of 1 metre*. The drain hose must not be kinked as this restricts drainage. The swivel elbow at the end of the hose can be turned in either direction, or can be detached if required, with a sharp twist and pull.


Drain hose connection:

1. Connected securely to a plastic drain pipe with a rubber nipple.
There is no need to use a non-return valve.
2. Connected securely to a standpipe.
3. Connected securely to a floor gully.

If required, the drain hose can be extended to a length of 5 m. The necessary parts can be purchased from the Miele Spare Parts Department or your Miele dealer.

Installation and connection

Electrical connection

 All electrical work must be carried out by a suitably qualified and competent person in accordance with current local and national safety regulations (BS 7671 in the UK).

The machine must only be operated with the voltage, frequency and fuse rating shown on the data plate supplied with the machine. Please ensure these match the site mains supply.


We recommend connecting the machine to the power supply via an IP44 plug and socket which must be easily accessible for servicing and maintenance work after the machine has been installed.


For hard-wired machines, connection should be made via a suitable mains switch with all-pole isolation which when in the off position ensures a 3 mm gap between all open contacts.


For extra safety and protection we recommend connecting the machine by a 30 mA residual current device (RCD).

An electrical safety test must be carried out after installation and after any service work.

The mains connection cable may only be replaced by an original Miele spare part.

 If the machine is disconnected from the electricity supply adequate measures must be taken to ensure that the machine cannot be reconnected to the electricity supply until all work has been carried out.

 This machine can be converted to a different voltage. Please observe the switching instructions given on the wiring diagram. Conversion may only be carried out by a Miele authorised service dealer or Miele technician. If the machine has been converted, the *heater rating* must also be adapted.

 The machine must be permanently connected to the electricity supply so that the door can be opened. For this reason, it must not be connected to devices such as timers which would switch it off automatically.

WARNING
THIS MACHINE MUST BE
EARTHED

Single phase AC 230 V - country variant

This device is intended for connection to the power supply with Earth Fault Loop impedance Z_s not exceeding 0.38 Ohms.

If in doubt please contact your electricity supplier or a qualified electrician for advice.

Technical data

Height	850 mm
Width	595 mm
Depth	725 mm
Depth with door open	1,085 mm
Weight	107 kg
Max. load bearing in operation	3000 Newton
Capacity	5.5 kg dry laundry
Voltage	See data plate
Connected load	See data plate
Fuse rating	See data plate
Emission sound pressure level in accordance with EN ISO 11204/11203	< 70 dB re 20 µPa
Minimum water flow pressure	100 kPa (1 bar)
Maximum water flow pressure	1000 kPa (10 bar)
Inlet hose length	1.55 m
Mains connection cable length	1.80 m
Max. delivery head (drain pump version)	1.00 m
LEDs	Class 1
Product safety standard	EN 10472, EN 60335
Test certificates awarded	See data plate

United Kingdom

Miele Co. Ltd.
Fairacres, Marcham Road
Abingdon, Oxon, OX14 1TW
Customer Contact Centre Tel: 0330 160 6600
E-mail: mielecare@miele.co.uk
Internet: www.miele.co.uk

Australia

Miele Australia Pty. Ltd.
ACN 005 635 398
ABN 96 005 635 398
1 Gilbert Park Drive, Knoxfield, VIC 3180
Tel: 1300 464 353
Internet: www.miele.com.au

China

Miele (Shanghai) Trading Ltd.
1-3 Floor, No. 82 Shi Men Yi Road
Jing' an District
200040 Shanghai, PRC
Tel: +86 21 6157 3500, Fax: +86 21 6157 3511
E-mail: info@miele.cn, Internet: www.miele.cn

Miele (Hong Kong) Limited

41/F - 4101, Manhattan Place
23 Wang Tai Road
Kowloon Bay, Hong Kong
Tel: (852) 2610 1025, Fax: (852) 3579 1404
Email: customerservices@miele.com.hk
Website: www.miele.hk

India

Miele India Pvt. Ltd.
Ground Floor, Copia Corporate Suites
Plot No. 9, Jasola, New Delhi - 110025
Tel: 011-46 900 000, Fax: 011-46 900 001
E-mail: customercare@miele.in, Internet: www.miele.in

Ireland

Miele Ireland Ltd.
2024 Bianconi Avenue
Citywest Business Campus, Dublin 24
Tel: (01) 461 07 10, Fax: (01) 461 07 97
E-Mail: info@miele.ie, Internet: www.miele.ie

Manufacturer: Miele & Cie. KG

Carl-Miele-Straße 29, 33332 Gütersloh, Germany

Miele

Malaysia

Miele Sdn Bhd
Suite 12-2, Level 12
Menara Sapura Kencana Petroleum
Solaris Dutamas No. 1, Jalan Dutamas 1
50480 Kuala Lumpur, Malaysia
Phone: +603-6209-0288
Fax: +603-6205-3768

New Zealand

Miele New Zealand Limited
IRD 98 463 631
Level 2, 10 College Hill
Freemans Bay, Auckland 1011, NZ
Tel: 0800 464 353
Internet: www.miele.co.nz

Singapore

Miele Pte. Ltd.
163 Penang Road
04 - 03 Winsland House II
Singapore 238463
Tel: +65 6735 1191, Fax: +65 6735 1161
E-Mail: info@miele.com.sg
Internet: www.miele.sg

South Africa

Miele (Pty) Ltd
63 Peter Place, Bryanston 2194
P.O. Box 69434, Bryanston 2021
Tel: (011) 875 9000, Fax: (011) 875 9035
E-mail: info@miele.co.za
Internet: www.miele.co.za

United Arab Emirates

Miele Appliances Ltd.
Gold & Diamond Park
Office No. 217-6, Sheikh Zayed Road
P.O. Box 11 47 82 - Dubai
Tel: +971 4 3044 999
Fax: +971 4 3418 852
800-MIELE (64353)
E-Mail: info@miele.ae
Internet: www.miele.ae