


Abbridged Instructions for MasterLine PFD 400 – PFD 401 Dishwashers

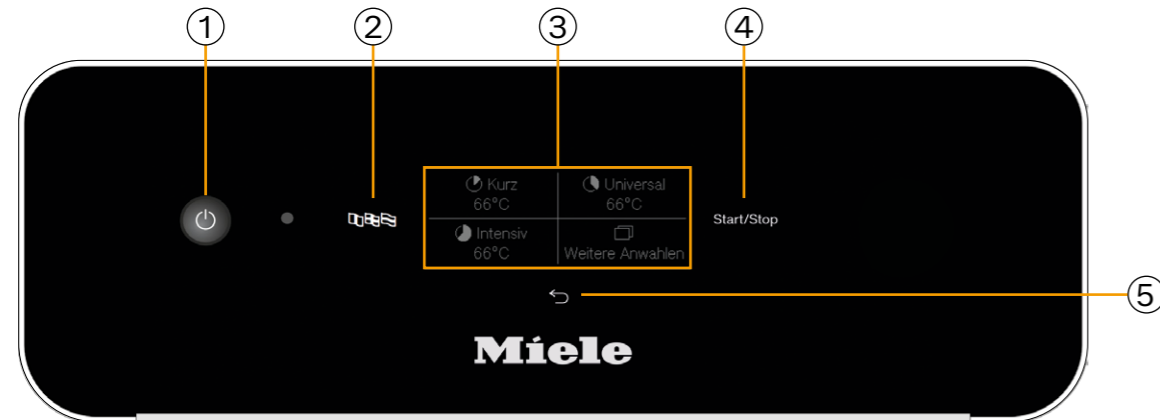

- ① For switching the dishwasher on and off
- ② For selecting the display language
- ③ Touch display: For displaying and selecting control elements
- ④ For starting or cancelling a programme
- ⑤ For cancelling a process on the user interface (not for cancelling programmes!)

Programme start

⏻ – Programme selection in touch display – Delayed start of programme using timer ⌚ in touch display – Start/Stop

End of programme

Opening door manually when machine is switched on.

Programme cancellation

Only in exceptional circumstances, via Start/Stop – Confirmation required.

Interrupting a programme

Only in exceptional circumstances by manually opening the door.

Preparing for a programme cycle


☼ Add **rinse aid** (container capacity approx. 300 ml)
'Empty' indicator in display

⤵ Add **reactivation salt** with door half-open
(container capacity approx. 2 kg)
'Empty' indicator in display

/// **Manual dispensing of detergent:** Pour detergent into the detergent container – in all processes (except in Super Short, Cold and Reactivation)

Super Short programme: pour powder detergent directly onto the door panel (the use of tablets is not possible in the Super Short programme)

Automatic dispensing of detergent: When dispensing via external dispenser pump or using an integrated dispenser pump: replace canisters when empty.

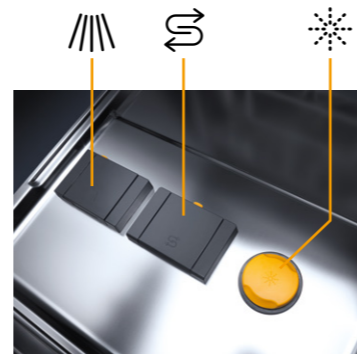

Upper basket height adjustment

The upper basket can be adjusted to two heights with a gap of approx. 5 cm between the two positions (to accommodate larger items in the upper or lower basket respectively).



Untighten the knurled nuts on either side and adjust the basket to the required height before retightening the nuts.



Turn the upper basket water connection to the upper or lower position so that it engages in the chosen position.