


Abbrided Instructions for MasterLine PFD 404 – PFD 408 Dishwashers

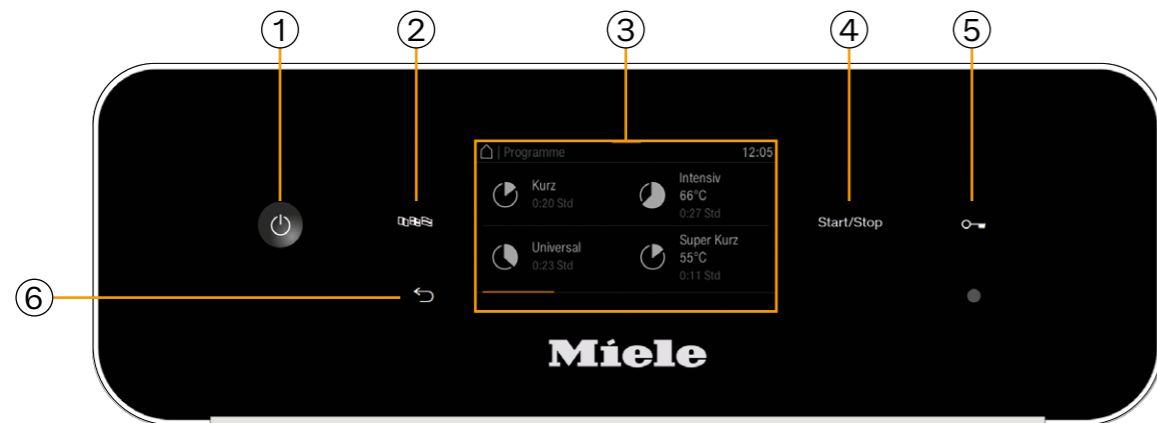

- ① For switching the dishwasher on and off
- ② For selecting the display language
- ③ Touch display: For displaying and selecting control elements
- ④ For starting or cancelling a programme
- ⑤ For opening the door or interrupting a programme.
The door should and can only be opened using this button!
- ⑥ For cancelling a process on the user interface (not for cancelling programmes!)

Programme start

⏻ – Programme selection on touch display – Selection/deselection of additional options and delayed programme start using the timer ⌚ in the touch display – Start/Stop

End of programme

AutoOpen function active: Door opens automatically
AutoOpen function deactivated: Door opened using ⏻

Programme cancellation

Only in exceptional circumstances, via Start/Stop – Confirmation required

Interrupting a programme

Only in exceptional circumstances via ⏻ – Confirmation required

Opening the door using the emergency release device

The emergency release should only be used when it is no longer possible to open the door normally, e.g. in the event of a power failure. If the emergency release is operated during a programme cycle, hot water can escape.

The emergency release is operated using the tool supplied. Insert the tool into the gap between the door and the lid or worktop on the right (there should be a 1 cm gap between the right-hand edge of the tool and the right-hand side of the display).

Apply pressure with the tool against the catch mechanism until the door audibly disengages (less pressure is needed to release the catch if pressure is simultaneously applied to the door).



Preparing for a programme cycle

- ☼ Add **rinse aid** (container capacity approx. 300 ml)
'Empty' indicator in display
- ↻ Add **reactivation salt** with door half-open (container capacity approx. 2 kg)
'Empty' indicator in display
- ☼ **Manual dispensing of detergent:** Pour detergent into the detergent container – in all processes (except in Super Short, Cold and Reactivation)
Super Short programme: pour powder detergent directly onto the door panel (the use of tablets is not possible in the Super Short programme)
- Automatic dispensing of detergent:** When dispensing via external dispenser pump or using an integrated dispenser pump: replace canisters when empty.



Upper basket height adjustment

The upper basket can be adjusted to two heights with a gap of approx. 5 cm between the two positions (to accommodate larger items in the upper or lower basket respectively).



Untighten the knurled nuts on either side and adjust the basket to the required height before retightening the nuts.



Turn the upper basket water connection to the upper or lower position so that it engages in the chosen position.